



Viral Filter

EMT-Basic

Advanced EMT

Paramedic

INDICATIONS

- For patients with known or suspected infectious disease.

PURPOSE


- To provide protection from exposure of infectious disease while maintaining an airway.

CONTRAINDICATIONS

PROCEDURE

- Connect equipment onto airway devices as directed by the manufacturer.
- Recommended order:** Advanced Airway/Mask → ITD OR Nebulizer (if being used) → HEPA/Viral Filter → Capnography → Bag/Ventilator

REFERENCE GRAPHICS

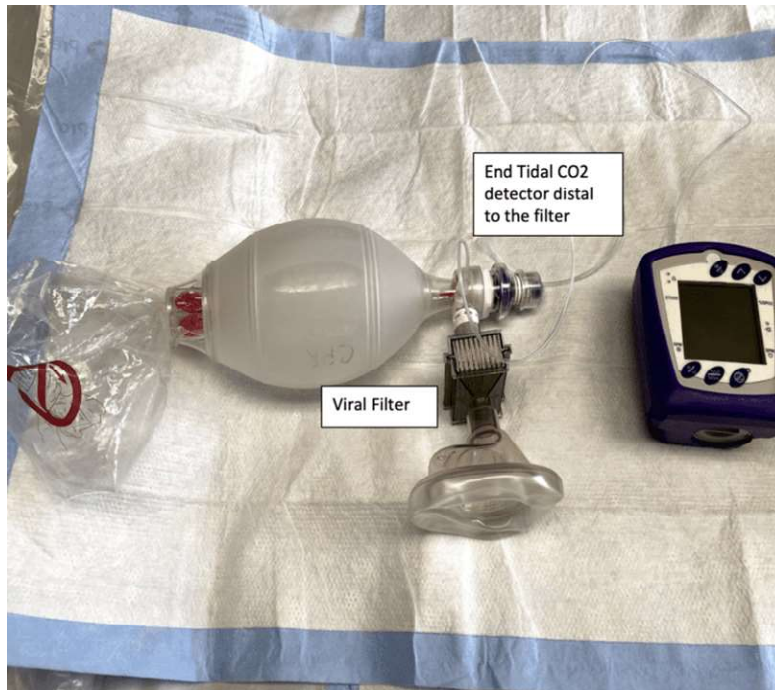

KEY POINTS

- All monitoring device fittings should be standard sized to fit all airway adjuncts.
- ITD OR nebulizer, if used, should be placed closest to patient after airway adjunct.



Medical Director: Ben Weston, MD MPH

Revision Date: April 2020